



BJC-4000LS-V2

LITHIUM

DATA SHEET & OPERATING INSTRUCTIONS

PORTABLE JUMP STARTER 12/24 Volt



Voltage	CCA	Peak Amps	Battery	Size / Weight
12/24 Volt	1500 @ 12V 750 @ 24V	7,600 @ 12V 3,800 @ 24V	2 x 15 Ah - 12V 750CCA Battery LiFePO4	280 x 260 x 360 mm Approximately 13Kg



Features

- Complies with WHS Regulations
- Powder Coated Steel Cabinet
- Reverse Polarity Protection Buzzer - LED Warning Light
- Anti Spike Protection, Local stock, user serviceable
- Battery Isolation Switch - 12Volt - Off - 24 Volt Local stock, user serviceable
- Voltage Selection and Indicator Light
- Will Jump start vehicles - with dead flat Batteries

- Digital Voltmeter to monitor Voltage status
- Long Life - and maintenance free
- Fuse: Ignition Protected Auto Reset - in case of short circuit Maintenance Free, no replacement required.
- Auto-activated Fuse installation
- Aircraft Models for various Voltages
- Custom Modifications available on request

Usage

- Portable high-capacity mobile jump starter.
- Suitable for Car/Light Commercial vehicle dealer workshops, Panel Beaters, Minibus repairers, Mining Companies, Aviation, Defence, Councils, TAFE, Hire Companies, Auction Yards.



Performance

	@ 12 Volts	@ 24 Volts
Cold Cranking Amps	CCA 1500	CCA 750
Peak Amps	PA 7,600	PA 3,800

Battery

2 x 15 Ah - 12V 750CCA Battery LiFePO4 Local stock, user serviceable	Part number 512-DLF20L-BS
--	-------------------------------------

Physical and Dimensional Properties

Weight	Each unit weighs approximately 13Kg
Width	280 mm
Length	260 mm
Height	360 mm
Cable Length	1.5 m
Cable Size	50 mm2 (AWG2/0) Superflex, dual insulated pure multi-strand copper
Connections	Anderson to Clamp (Standard), Anderson to Anderson and Anderson to CAT (Optional extras)
Clamps	1000A Insulated Extra heavy duty, nickel plated copper

Serviceability

User serviceable does not void warranty



START PROCEDURE

1

Following vehicle manufacturers jump starting procedures, connect jump start lead to vehicle.

2

Turn switch to either 12V or 24V start position and start your vehicle.

3

Once the engine has started, turn jump starter switch to OFF position.

CHARGING

- CHARGE JUMP STARTER IN THE OFF POSITION
- KEEP JUMP STARTER ON CHARGE WHEN NOT IN USE
- Automatic Smart Charger BCS-AL1205 12 Volts 5 Amps

Durst Industries (Aust.) Pty Ltd.

1/11 Packard Ave, Castle Hill NSW 2154
Australia

DURST.COM.AU

SALES@DURST.COM.AU

INTL +61 2 9660 1755