

HYPASTART

QUICK START GUIDE

FOR MODELS: X1500, X2500, X2500MS, X4500MS

HYPASTART models X2500/2500MS/X4500MS are dual 12/24V units whereas the X1500 is 12V only, but all are 12V systems internally, therefore voltage and capacity figures displayed will have a maximum range of up to 15v.



Durst Industries (Aust.) Pty Ltd.
1/11 Packard Ave. Castle Hill 2154
NSW Australia

 DURST.COM.AU

 HYPASTART.COM.AU

 SALES@DURST.COM.AU

 INTL +61 2 9660 1755

STATUS CHECK

The Hypastart 'ready' light will turn green once the capacity of your unit reaches approximately 50% or 13.5V

ENERGIZING & STARTING



WARNING!

ALWAYS REFER TO YOUR ENGINE OWNER'S INSTRUCTION MANUAL ON JUMP STARTING PROCEDURES PRIOR TO USING THE HYPASTART TO AVOID RISK OF DAMAGE OR INJURY.

NEVER CONNECT TO FUEL LINES

ALWAYS DOUBLE CHECK YOUR CONNECTIONS

- **STEP 1.** Switch the Hypastart to the off position.
- **STEP 2.** Connect the + Positive red lead clamp to the battery terminal
- **STEP 3.** Connect the - Negative clamp as far away from the battery as possible and to a non-moving metal part of the engine or chassis block (Refer to your engine owners manual).
- **STEP 4.** Turn the switch to the energize position, if a red light comes on, this indicates the charge has begun
- **STEP 5.** When the green light illuminates, turn the switch to the start position and start your engine
- **STEP 6.** Let the Hypastart run for 10 seconds once the engine is started. This will recharge your unit.
- **STEP 7.** Turn the Hypastart to the off position
- **STEP 8.** Disconnect the lead clamps

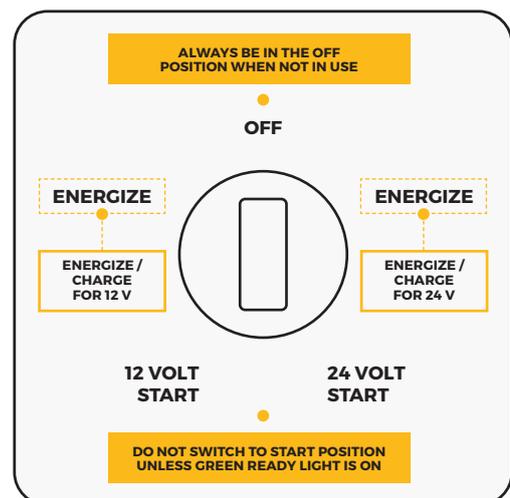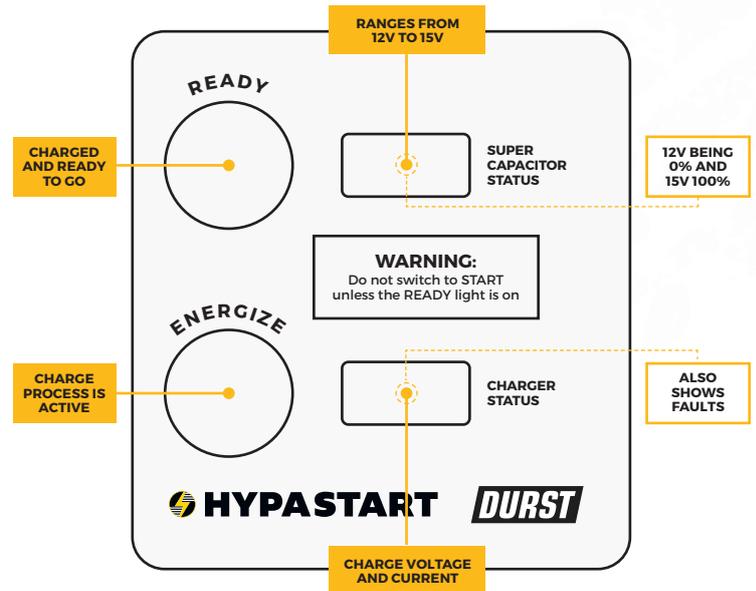

To get the latest copy of the Hypastart User Manual, scan the QR code above or visit;

DURST.COM.AU/HYPASTART